


ESTIMATED CHAIN LIFE

Chain life is sometimes measured in inch-feet and can vary widely depending on the type of chain employed and the many variables related to the job. Depending on the type you select, the right ICS® diamond chain used under optimum conditions by a trained operator should deliver the performance shown in the charts below.

For comparison purposes only. Do not use to bid jobs.

INCH-FOOT DEFINITION

- An in-ft is defined as DEPTH of cut in inches multiplied by LENGTH of cut in feet.

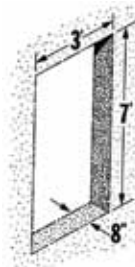

$$3 + 7 + 3 + 7 = 20 \text{ feet}$$

$$8 \text{ in} \times 20 \text{ ft} = 160 \text{ in-ft}$$

Outside of the U.S., square meters is used instead of in-feet.

$$0.91 \text{ m} + 2.13 \text{ m} + 0.91 \text{ m} + 2.13 \text{ m} = 5.8 \text{ m}$$

$$20 \text{ cm} \times 6.08 \text{ m} = 1.22 \text{ m}^2$$

Gas Saws

Chain Type	0 in-ft (0 m ²)	200 in-ft (1.55 m ²)	400 in-ft (3.10 m ²)	600 in-ft (4.65 m ²)	800 in-ft (6.19 m ²)	1000 in-ft (7.74 m ²)
------------	--------------------------------	-------------------------------------	-------------------------------------	-------------------------------------	-------------------------------------	--------------------------------------

MAX™ SERIES

Hydraulic Saws

Chain Type	0 in-ft (0 m ²)	200 in-ft (1.55 m ²)	400 in-ft (3.10 m ²)	600 in-ft (4.65 m ²)	800 in-ft (6.19 m ²)	1000 in-ft (7.74 m ²)
------------	--------------------------------	-------------------------------------	-------------------------------------	-------------------------------------	-------------------------------------	--------------------------------------

FORCE4®

Chain wear is normal, but excessive wear can result from factors that usually can be corrected. Examining the chain can help pinpoint the source of trouble.




NORMAL WEAR

Example of a worn out chain under normal usage. No damage to the chassis, drive links or segments. Segments have been worn down to the weld pad.



NO WATER

Heat generated by running a chain "dry" can disintegrate o-rings and degrade the diamonds. Drive links are dark blue and connecting links have burred edge on the bottom.

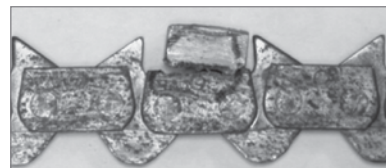

IMPACT DAMAGE

Broken segment caused by attempting to insert the chain into a slot narrower than the diamond segments.



WORN SPROCKET / IMPROPER TENSION

Chain has been run with improper tension (too loose) or drive sprocket is worn out. Sprocket was turning when the chain was stationary, causing damage to the drive links.



WORN BAR

Chain has been run on a bar that has excessive rail wear causing the drive links to be worn flat.

ICS, BLOUNT INC. HEADQUARTERS | 4909 SE International Way Portland, OR 97222-4679 | PHONE 800.321.1240 · FAX 503.653.4393

© Copyright 2014-2015 ICS, Blount Inc. Privacy statement specifications subject to change without notice.

Pricing and specifications subject to change without notice. All rights reserved. ICS, WallWalker, SpeedHook, SealPRO, FORCE4 and PowerGrit are registered trademarks of ICS. The best way to cut concrete, DCT, TSS, ProFORCE and TwinMAX are trademarks of ICS.1214